
Measuring Guide for Wood Cornices

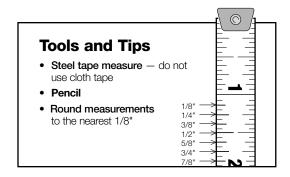

Choose a Mount Type: Inside Mount or Outside Mount

Inside Mount: Full Recess Window treatments are installed completely inside the window casing.



An **Inside Mount Wood Cornice** is manufactured with straight-cut edges on both ends and looks best when it is mounted flush to the window casing. The cornice width is determined by the width of the window treatment ordered.

Use the chart on the following page to determine if your window is deep enough for a Full Recess Inside Mount Cornice. No further measuring is required.

Full Recess Inside Mount Cornice

Inside Mount: Partial Recess Window treatments extend beyond the window casing.



Partial Recess

An **Inside Mount Wood Cornice** is manufacturered with straight-cut edges on both ends. The cornice width is determined by the window treatment ordered.

Returns (side pieces) or a dust cover cannot be ordered for an Inside Mount Wood Cornice. Depending how far the cornice extends beyond the window casing, consider ordering your cornice as an Outside Mount with a special return length.

Outside Mount: Window treatments are installed outside the window casing.



An **Outside Mount Wood Cornice** is manufactured with standard returns (side pieces) and a dust cover automatically determined by the window treatment ordered. No further measuring is required.

If your Outside Mount Cornice requires longer returns, please specifiy at the time of order. **Note:** Returns are measured and cut from the INSIDE of the miter to ensure the most accurate fit.

For an **Outside Mount Wood Cornice** ordered separately (without a blind or shade):

- 1. Measure Cornice Width: Measure width to be covered. Maximum width is 366" (exception: Symphony is 92 1/2") Make sure that you have enough space on all sides of your walls to mount your Cornice.
- 2. Measure for Clearance: Add additional space for clearance for under treatments (i.e. drapery), mounting brackets and operating controls. Note: Cornice profile sizes vary by style.
- **3. Measure Cornice Return Length:** Measure the distance your cornice will extend from the mounting surface and record measurement as your special return length.

Note: If Wood Cornice is not being installed over a window treatment, the backside measurements of the cornice and returns will be the exact sizes ordered. No additional deductions are taken.




Follow these steps to determine if your window is deep enough for a Inside Mount Cornice:


- A. Select your product and Cornice type and locate the **FULL RECESS DEPTH** column.
- B. Measure the depth of your window casing. If the depth is less than the Full Recess Depth measurement, order Cornice as an Outside Mount. Special return lengths can be ordered for Outside Mount Cornices.

Cornice Return Information

	Standard Return	Full Recess
Product and Cornice Type	Inside Width	Depth
Vertical Bline		71/11
4½" Symphony Wood Cornice	5½" 5½"	61/4"
5½" Majestic Wood Cornice	5½" 5½"	6½"
7½" Majestic Wood Cornice		613/16"
5½" Royal Wood Cornice	5½"	615/16"
7½" Royal Wood Cornice	5½"	7½"
Roman, Pleated, Cellular and Solar/Roller Shades 4½" Symphony Wood Cornice* 3¾" 4½"		
4½" Symphony Wood Cornice* 5½" Majestic Wood Cornice*	33/4"	472
7½" Majestic Wood Cornice	33/4"	51/16"
5½" Royal Wood Cornice*	33/4"	53/16"
7½" Royal Wood Cornice	3¾"	5¾"
Natural Shad	es 3%"	43/8"
4½" Symphony Wood Cornice		
5½" Majestic Wood Cornice	35/8"	45/8" 415/16"
7½" Majestic Wood Cornice	35/8"	
5½" Royal Wood Cornice	35%"	51/16"
7½" Royal Wood Cornice	35/8"	5%"
Slide-Vue TM	31/8"	47/8"
4½" Symphony Wood Cornice		
5½" Majestic Wood Cornice	31/8"	41/8"
7½" Majestic Wood Cornice	31/8"	47/16"
5½" Royal Wood Cornice	31/8"	4%16"
7½" Royal Wood Cornice	31/8"	51/8"
2" Horizontal Blinds (Wood, Faux, Composite, Aluminum and Vinyl)		
4½" Symphony Wood Cornice	5"	5¾"
5½" Majestic Wood Cornice	5"	5 ¹⁵ ⁄16"
7½" Majestic Wood Cornice	5"	6 ⁵ ⁄16"
5½" Royal Wood Cornice	5"	61/16"
7½" Royal Wood Cornice	5"	7"
2%" and 2½" Horizontal Blinds (Wood, Faux and Composite)		
4½" Symphony Wood Cornice	5"	5¾"
5½" Majestic Wood Cornice	5"	5 ¹⁵ ⁄16"
7½" Majestic Wood Cornice	5"	6 ⁵ ⁄16"
5½" Royal Wood Cornice	5"	67/16"
7½" Royal Wood Cornice	5"	7"
Sliding Panels		
4½" Symphony Wood Cornice	5"	5¾"
5½" Majestic Wood Cornice	5"	5 ¹⁵ ⁄16"
7½" Majestic Wood Cornice	5"	6 5∕16"
5½" Royal Wood Cornice	5"	6 ⁷ / ₁₆ "
7½" Royal Wood Cornice	5"	7"



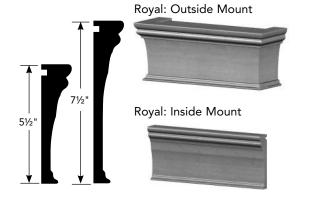

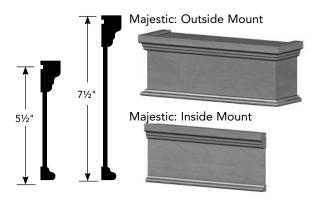

Minimum return length is $\frac{1}{2}$ ". Maximum return length is 8".

NOTE: If the cornice is to be used alone (no product type selected), the return length must be specified at the time of the order.

