

Measuring Information; Installation Types

Regular Window: How to Measure for Uncovered Window


1. Determine headrail type and the clear opening width for one-way draw or split draw (See diagrams) - the additional 3" shown for privacy is recommended if ordering one-way draw.
2. Match the clear opening width with dimension found under "C.O." COLUMN. For even spacing, round up width measurement to the next size in the stack chart. Split draw will have even numbers of vanes.
3. Order the corresponding dimension found in the "F.B.W." (Finished Blind Width).

Example: One-Way Draw Magnum™ 3½"


If determined width for clear opening window view is 54 ¾", order width needed to provide full unobstructed view is 63 ⅞".

NOTE: For one-way draw blinds add an additional 3" to the C.O. (clear opening) before calculating the FBW.

ONE WAY DRAW Finished Blind Width (F.B.W.)

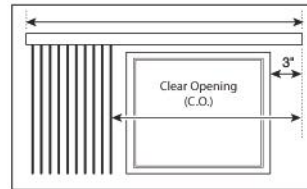

SPLIT DRAW (recommended for balanced appearance) Finished Blind Width (F.B.W.)

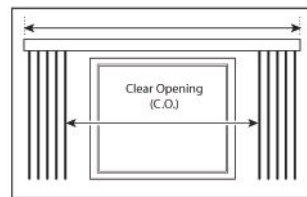

Vane Stacking Charts

3½" Vane Stacking Chart														
NO. OF VANES	ONE-WAY DRAW		SPLIT DRAW		NO. OF VANES	ONE-WAY DRAW		SPLIT DRAW		NO. OF VANES	ONE-WAY DRAW		SPLIT DRAW	
	C.O.	F.B.W.	C.O.	F.B.W.		C.O.	F.B.W.	C.O.	F.B.W.		C.O.	F.B.W.	C.O.	F.B.W.
4	10	13¼	8	13¼	24	65⅞	75	63¼	75	44	120¼	137¼	119	137¼
5	12¾	16			25	68	78¼			45	123¼	140		
6	15	19½	19½	14	26	70¼	81¼	69	81¼	46	126¼	143½	125	143½
7	18	22½			27	73	84½			47	129¼	146		
8	21¼	25¾	19	25¾	28	76	87½	75	87½	48	132	149	130½	149
9	23¾	28			29	79	90			49	134	153		
10	26	31	25	31	30	82	93	80	93	50	137	156	136	156
11	29	35			31	84	96			51	140	159		
12	32	38	30	38	32	87	100	86	100	52	143	162	141	162
13	34	41			33	90	103			53	145	165		
14	37	44	36	44	34	92	106	91	106	54	148	168	147	168
15	40	47			35	95	109			55	151	171		
16	43	50	41	50	36	98	112	97	112	56	154	174	152	174
17	45	53			37	101	115			57	157	178		
18	48	56	47	56	38	104	118	102	118	58	160	181	158	181
19	51	59			39	107	121			59	162	184		
20	54	62	52	62	40	109	125	108	125	60	165	187	164	187
21	57	65			41	112	128			61	168	190		
22	59	69	58	69	42	115	131	114	131	62	169	191	168	191
23	62	72			43	118	134							

C. O. = Clear Opening F.B.W. = Finished Blind Width Stack = F.B.W. - C.O.

For even spacing on outside mounts, round up width measurement to the next size in the stack chart. Split draw blinds must have even number of vanes.