

Measuring Guide for Fabric Wrapped Cornices

Tools and Tips

- Steel tape measure — do not use cloth tape
- Pencil
- Round measurements to the nearest 1/8"

1/8"
1/4"
3/8"
1/2"
5/8"
3/4"
7/8"

Choose a Mount Type: Inside Mount or Outside Mount

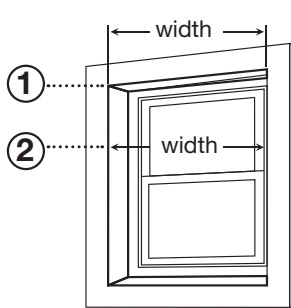


Figure 1

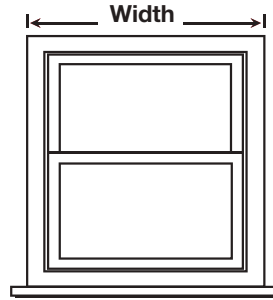


Figure 2

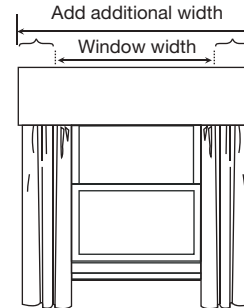


Figure 3

Inside Mount

- 1 Measure the exact width of the window opening at the very top of the casing (figure 1).
- 2 Measure the exact width of the window opening down from the top, depending on the desired drop of top treatments being ordered.

Note: Measure twice and document the smaller dimension, as not all window openings are perfectly square.



Outside Mount

- 1 Measure window width including molding (see figure 2).
- 2 Add any additional width desired, especially if hanging curtain panels or sheers under cornice (figure 3).


Premium Fabric-wrapped Cornices

- 1 Measure depth of window casing to determine if it will accommodate an inside mount. An inside mount cornice has a depth of 3" (mounting board/dust cover).
- 2 Determine inside or outside mount.

Note: Face width will be approximately 2" wider than the ordered width

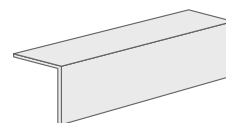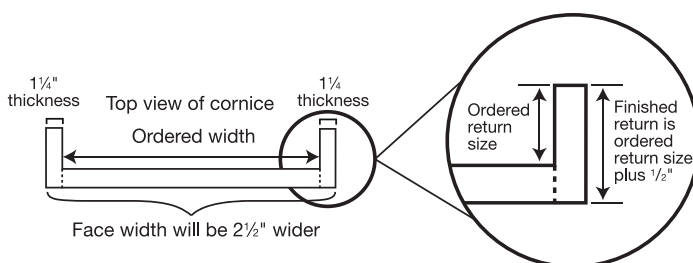

Inside Mount (side view)



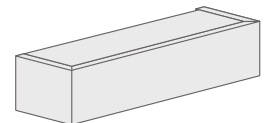


Outside Mount (side view)



Fabric-wrapped Cornice

1 Determine inside or outside mount

Note: Face width will be approximately 2½" wider than the ordered width

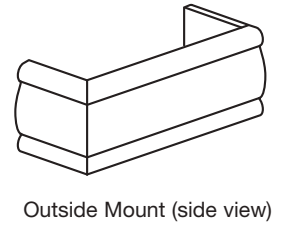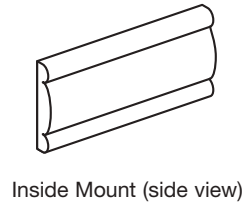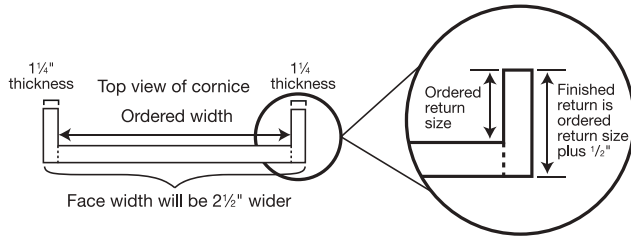

Bracket Distance:

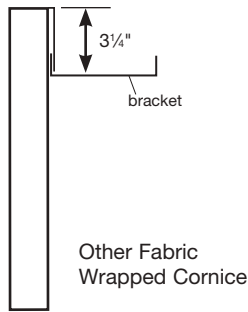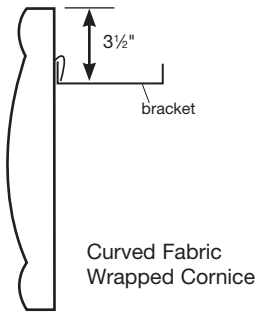

Installation Brackets

	Fabric Wrapped Cornice	Premium Fabric Wrapped Cornice
Finished Width	Number of brackets	Number of brackets
20" - 40"	2	3
40 1/16" - 76"	3	4
76 1/16" - 112"	4	5
112 1/16" - 148"	5	6
148 - 1/16" - 168"	6	7